



How to implement a table programming device (incl. driver)?

You can find the current drivers at secure.ikon.de/de/en/downloadportal/136-cliq-software-updates

It is essential to read the "Readme file", as at least two steps are necessary here.

1. In the first step, only the driver directory is created (C:\Program Files (x86)\STMicroelectronics).
2. In this directory, the corresponding file, suitable for the operating system, must be selected and installed.
 - Win7/Win8/Win10 32/64 bit

Link zum FAQ-Eintrag | Status as of: 25.01.2018 | Redteam