



How can I download the correct firmware in DCS ?

When new [firmware \(FW\)](#) is provided for your locking system, it is usually imported automatically by the CLIQ Web Manager (CWM) after 24 hours. For purchasing customers who host the CWM themselves and who also do not have an active connection to the [CLIQ Data Center \(DCS\)](#), this FW must be downloaded manually.

Therefore, this entry is only relevant for purchasing customers!

If you have already created several [certificate bundles \(CCB files\)](#): you must select which CCB file the FW is intended for when downloading the FW. In the following example, the last CCB file created is currently used for the existing installation and the corresponding FW must be imported into the CWM (7F....).

The screenshot shows the CLIQ Web Manager interface. On the left, a table titled 'History of Certificates for CWM Client, Produktiv' lists several certificates. The last entry, with serial number '7F5A20C4C202C4', is highlighted in yellow. A red arrow points from this entry to a 'Choose certificate' dialog box on the right. The dialog box contains a table with the same data as the table on the left, and the last entry is also highlighted in yellow. A 'Download Firmware' button is visible next to the highlighted entry in the dialog box.

Serial number	Created	Expiration date	
1C86D9DC009C37F	2017-03-08 09:57	2019-03-08 09:57	Download Firmware
586DCEB37F9137E	2017-03-08 09:57	2019-03-08 09:57	Download Firmware
68EBA2D0A2A72E9	2017-03-08 09:57	2019-03-08 09:57	Download Firmware
B8DE548F8AC2	2017-03-08 09:57	2019-03-08 09:57	Download Firmware
7F5A20C4C202C4	2017-03-08 09:57	2019-03-08 09:57	Download Firmware

Link zum FAQ-Eintrag | Status as of: 04.04.2018 | SNE