



How can you change the PIN of a sub-programming key (PSM, PN)?

The PIN of a sub-programming key can be adjusted as follows. It is important that you have access to the main programming key, a PUK is not required for sub-programming keys.

1. Log in with the PR
2. Insert the sub-programming key on the right
3. Click on the green arrow
4. Now go to the sub-programming key
5. Click on "Set new PIN"
6. Now enter the PIN of the main programming key
7. Then enter the new PIN for the sub-programming key 2x
8. Confirm with "OK"

[Link zum FAQ-Eintrag](#) | Status as of: 24.07.2019 | SNE