



What's the Approver Function and how is it set in the CLIQ Local Manager?

With the approver functions, the reading of the event logs from cylinders and keys is technically released. A separate programming key is required for this.

To activate the approver function, a tick is set in the general settings.

Once the approver function is activated, an "approver" role is available in the user roles. A programming key must be issued to a person and then the user must be given the Approver role.

The tick once set in the settings can only be deactivated together with an authorisation key!

[Link zum FAQ-Eintrag](#) | Status as of: 28.12.2022 | redTeam