



How can the PIN Code of the programming key be changed?

The pin of the inserted programming key can be changed at any time.
This is set under:

Settings - Programming Key Settings - PIN Management

[Link zum FAQ-Eintrag](#) | Status as of: 29.10.2019 | RedTeam