



## How can you change the password for the reading access for the main programming key / supervisor?

When a master key system is read in, the main programming key is automatically issued to the Supervisor user and the initial password "123456" is created for this user. With this user and password you can open the master key system in read mode without being in possession of the programming key.

This process is identical for every master key system. The initial password should therefore be changed for security reasons! This must be changed at the user.

---

[Link zum FAQ-Eintrag](#) | Status as of: 28.12.2022 | RedTeam