



How do I replace a defect wall programming device?

You order another wall programming device to import and configure in the locking system.

If there are already three wall devices in the software, the defective device must be set to inactive in CLIQ Local Manager before importing the new locking system data (.els file). Afterwards, the new device can be imported and put into operation.

[Link zum FAQ-Eintrag](#) | Status as of: 27.07.2023 | SBB