


Kabelübergang
Cable Connector

10314

Montageanleitung
Mounting Instructions

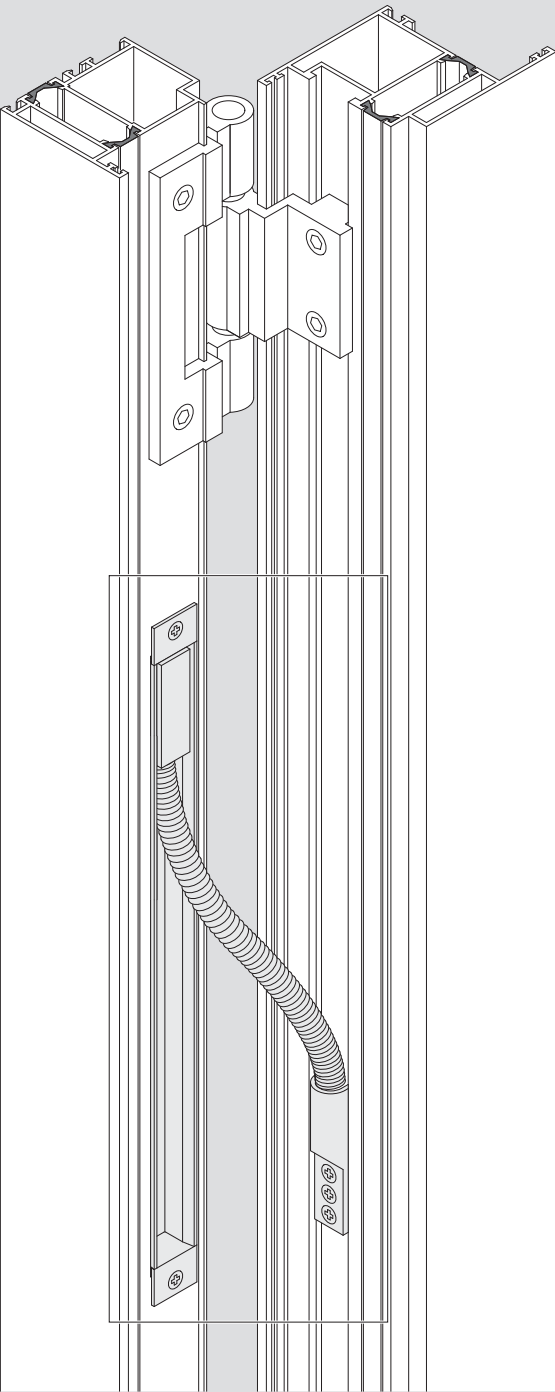

D01135 01


effeff
ASSA ABLOY



Aufbaumontage
surface mounted




Vollblatt
wooden and steel doors

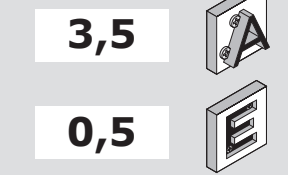

Falzluft
rebate clearance





Einbaumontage
flush mounted

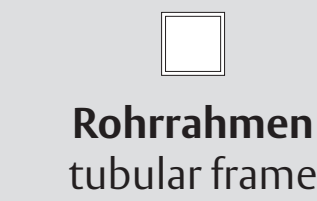


Rohrrahmen
tubular frame


10314-40-20--00

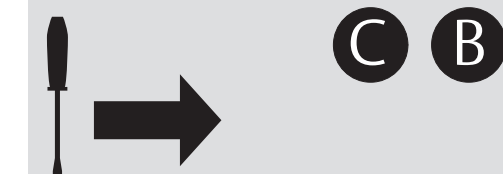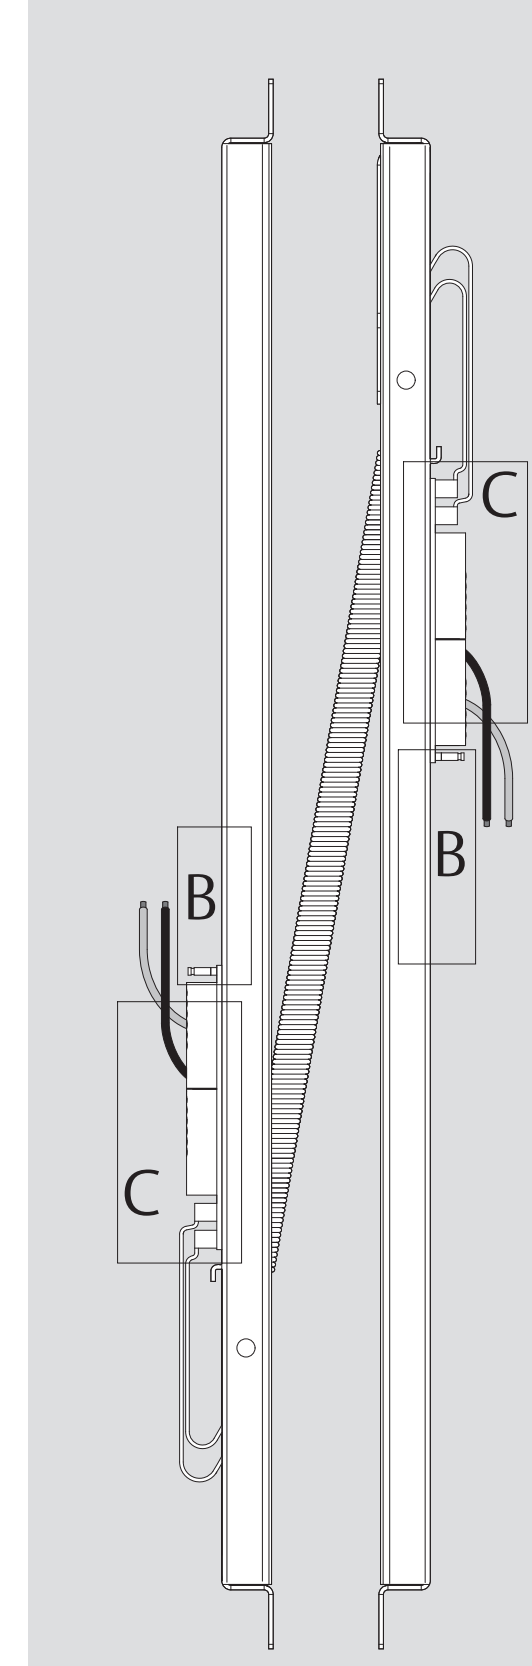


10314R40-----00
10314-40-----00

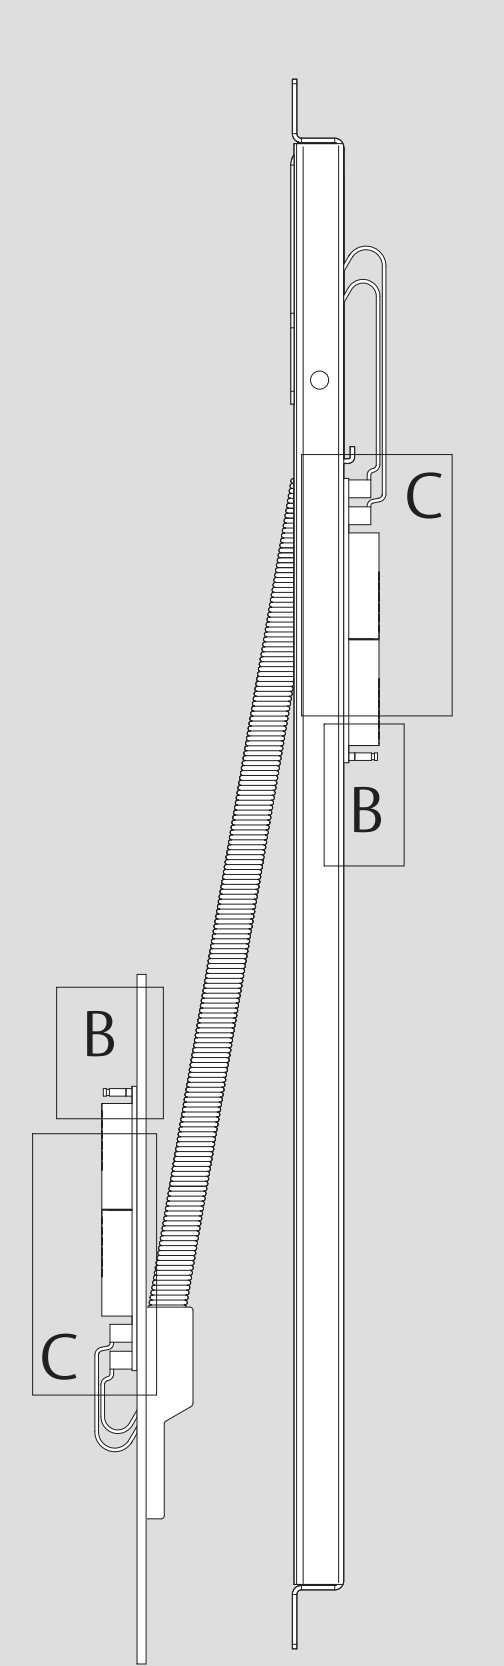


10314-34-10--00

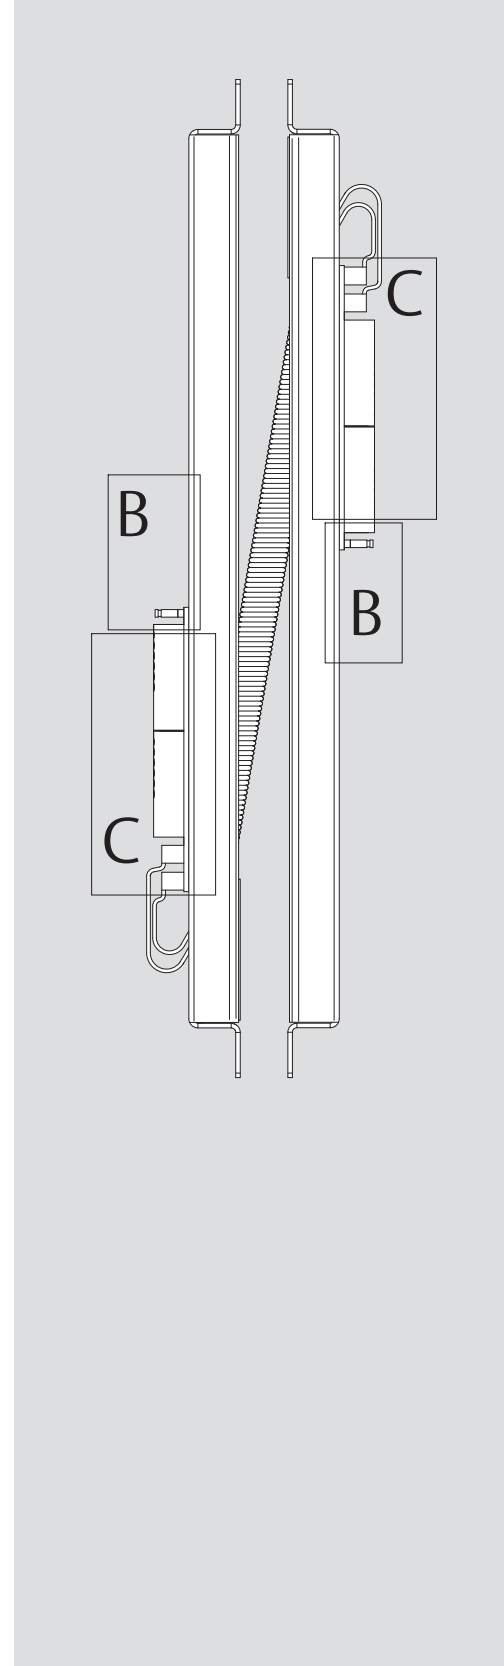










10314R34-----00
10314-34-----00

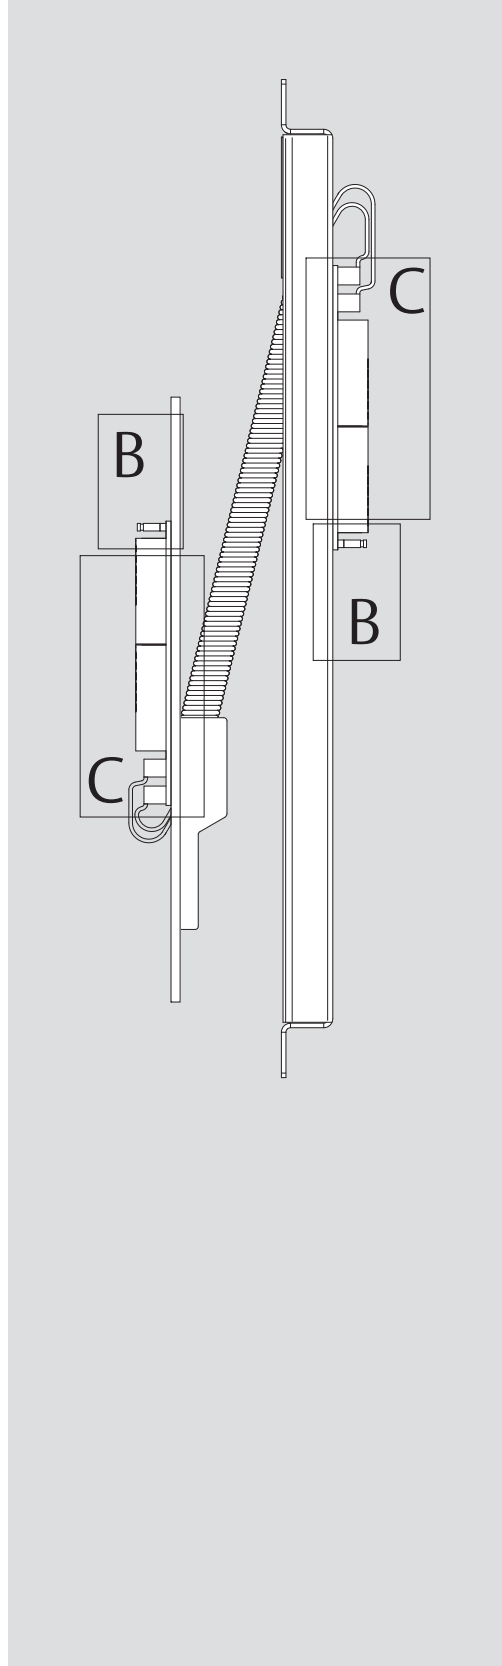


10314-41----00

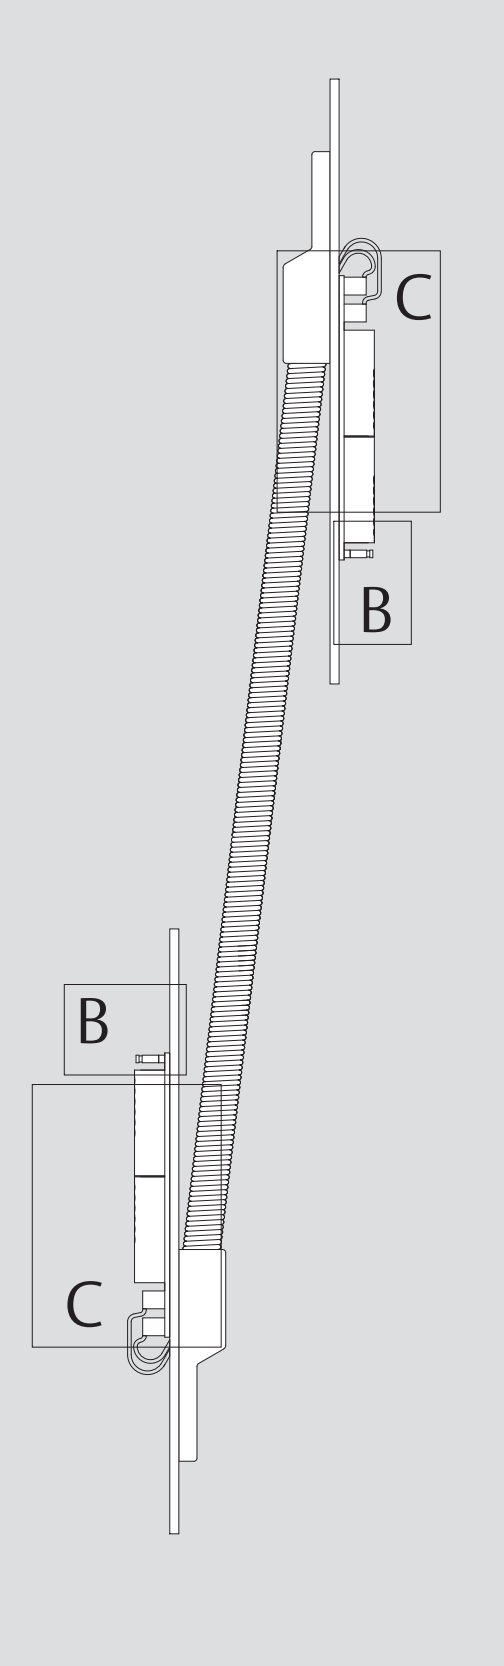


10314-31----00

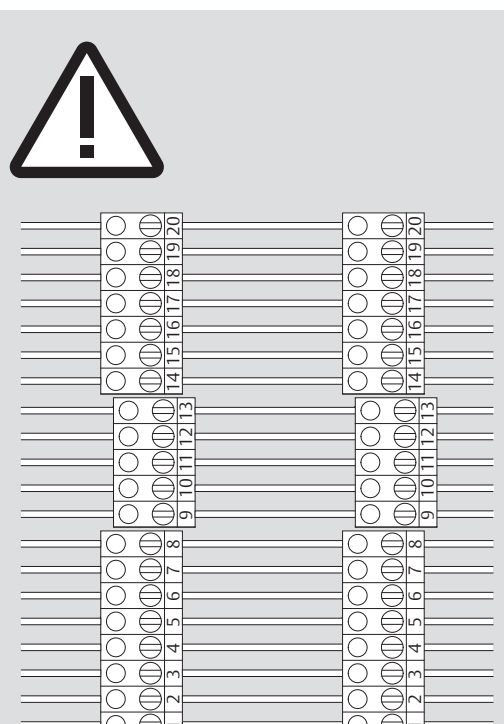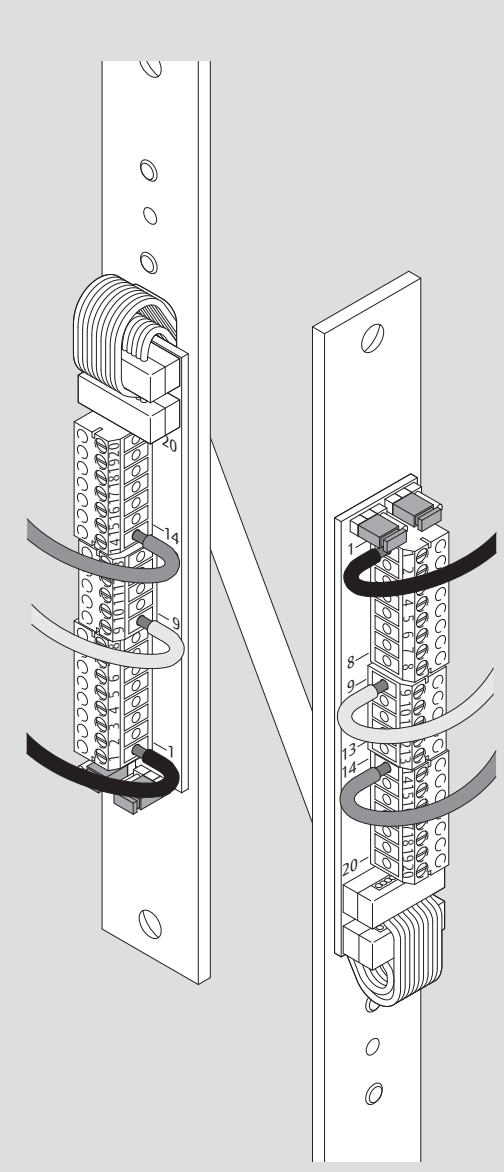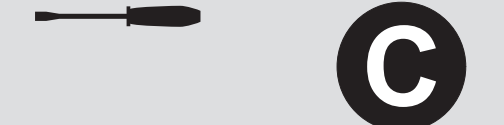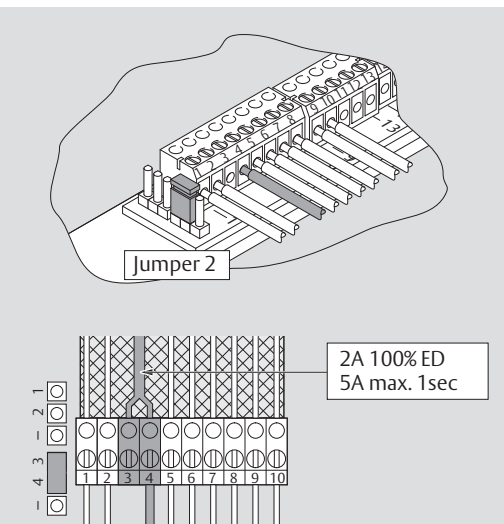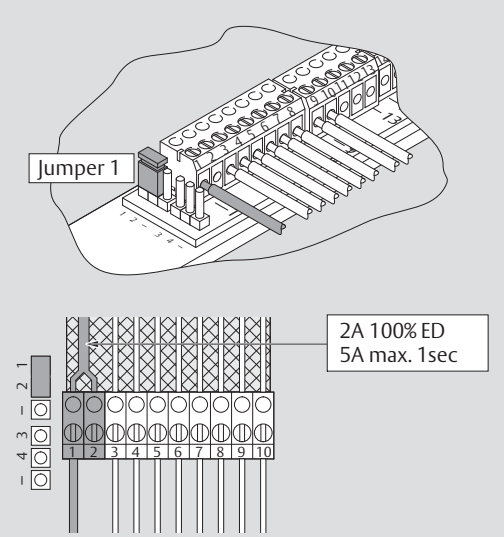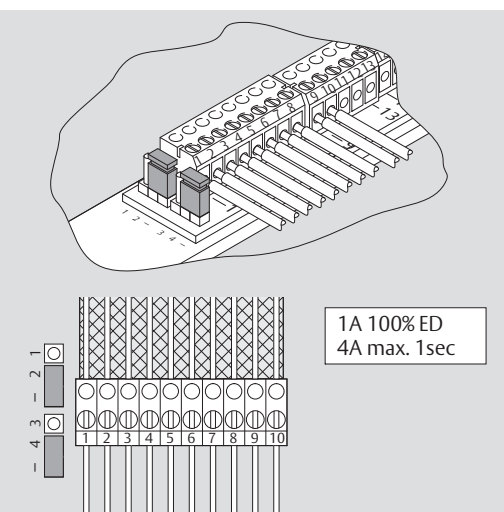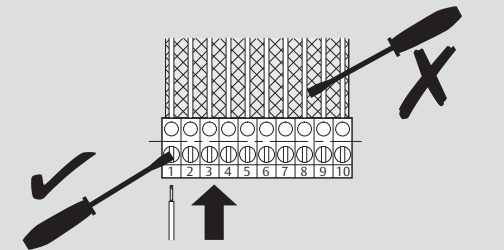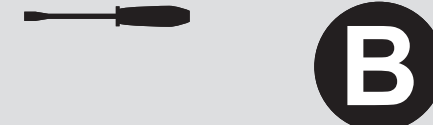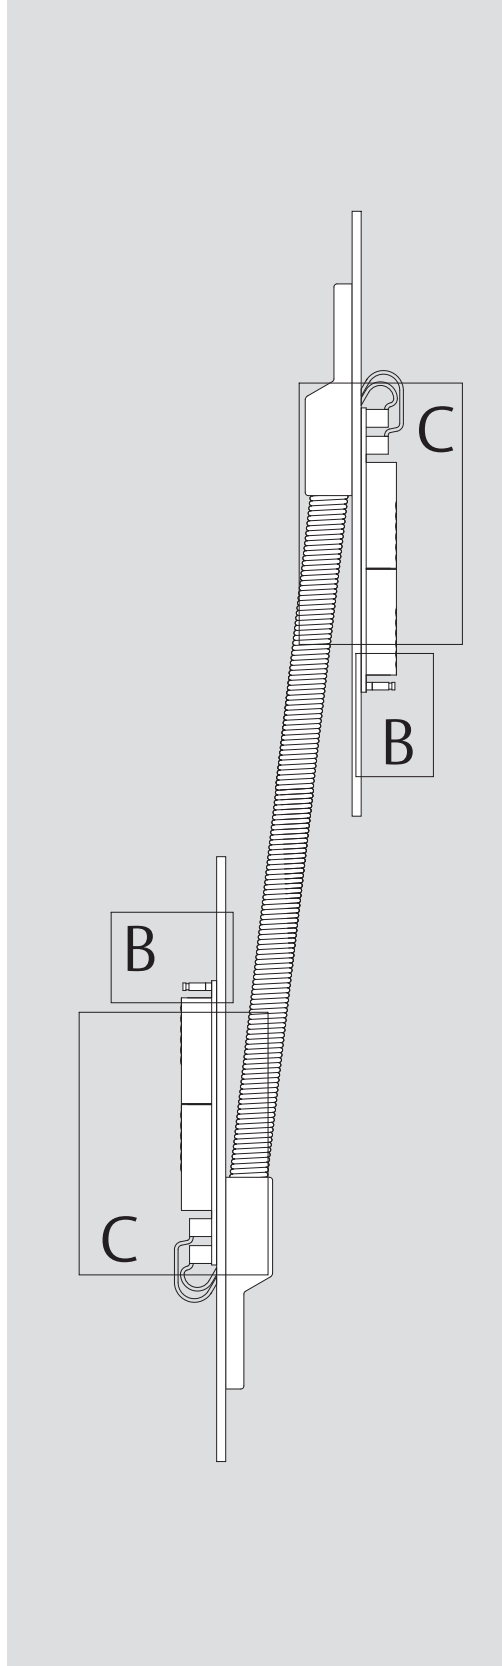


10314-34-10--00

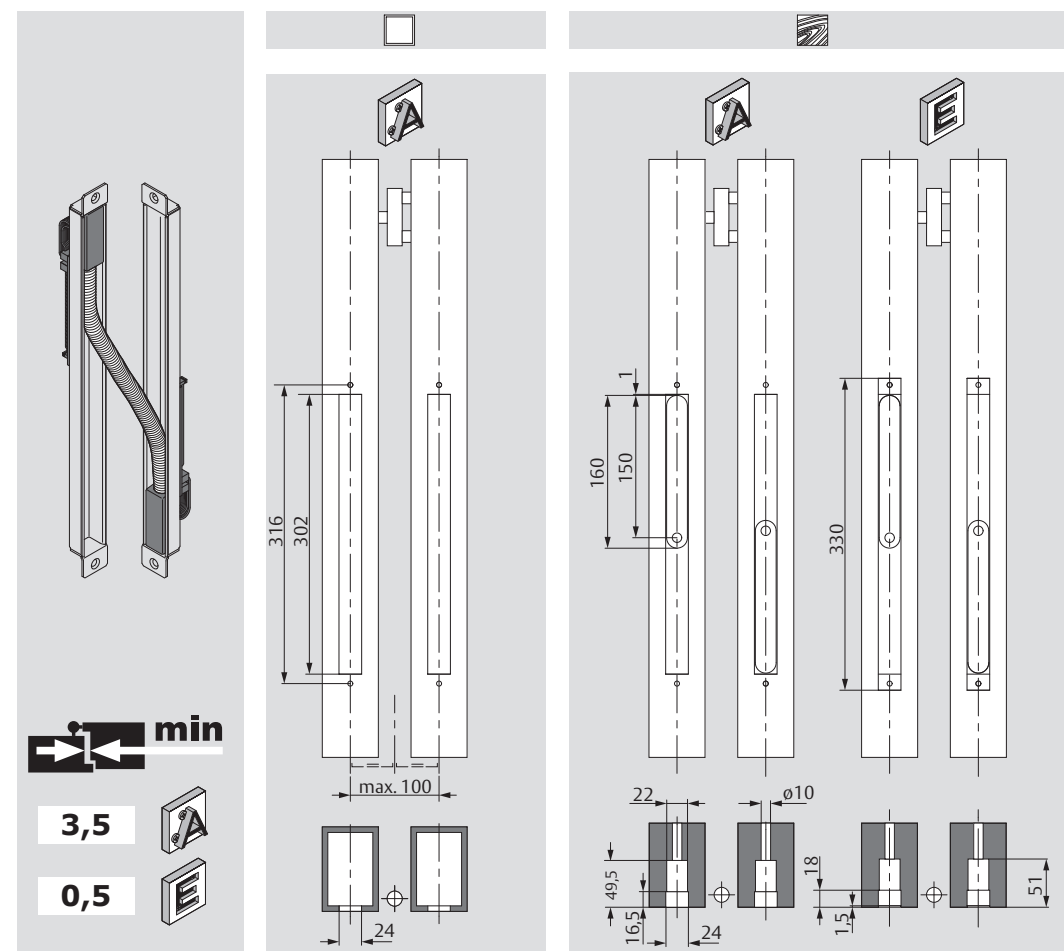


10314-34-----00

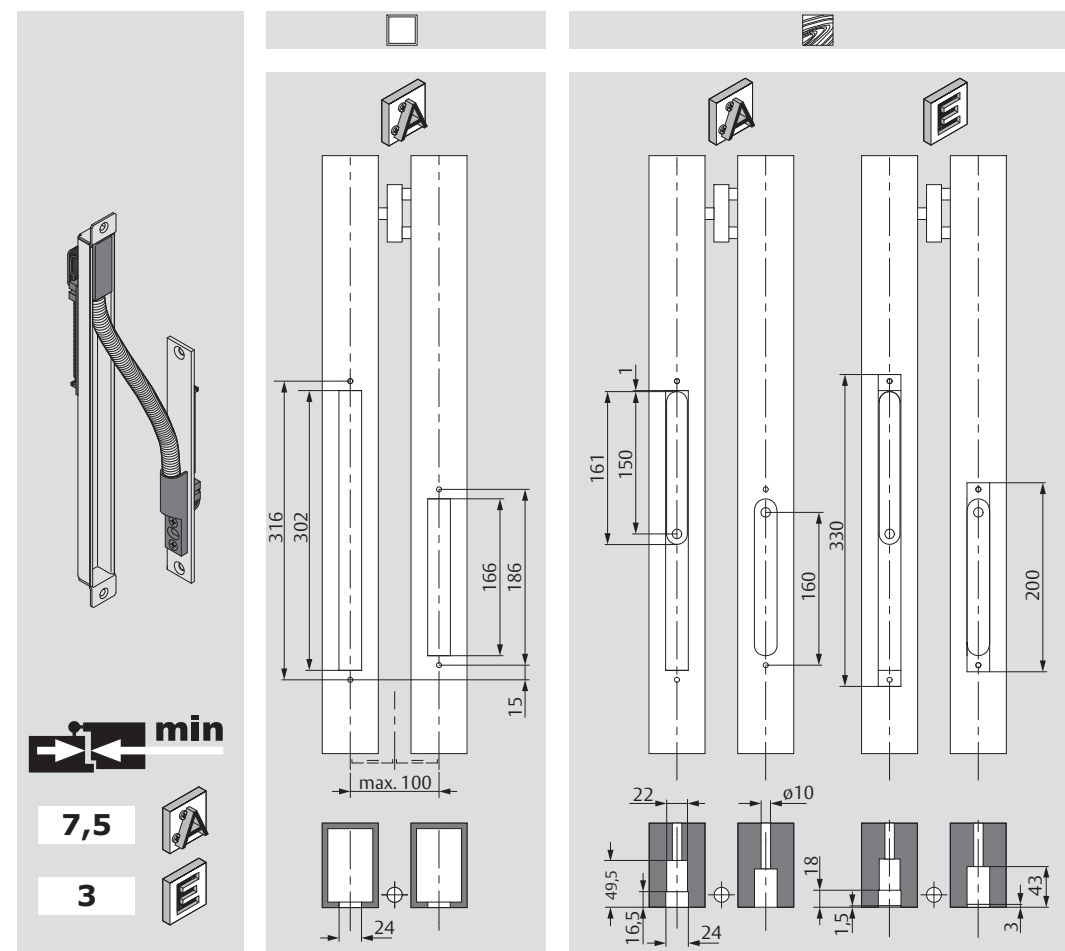


10314R34-----00

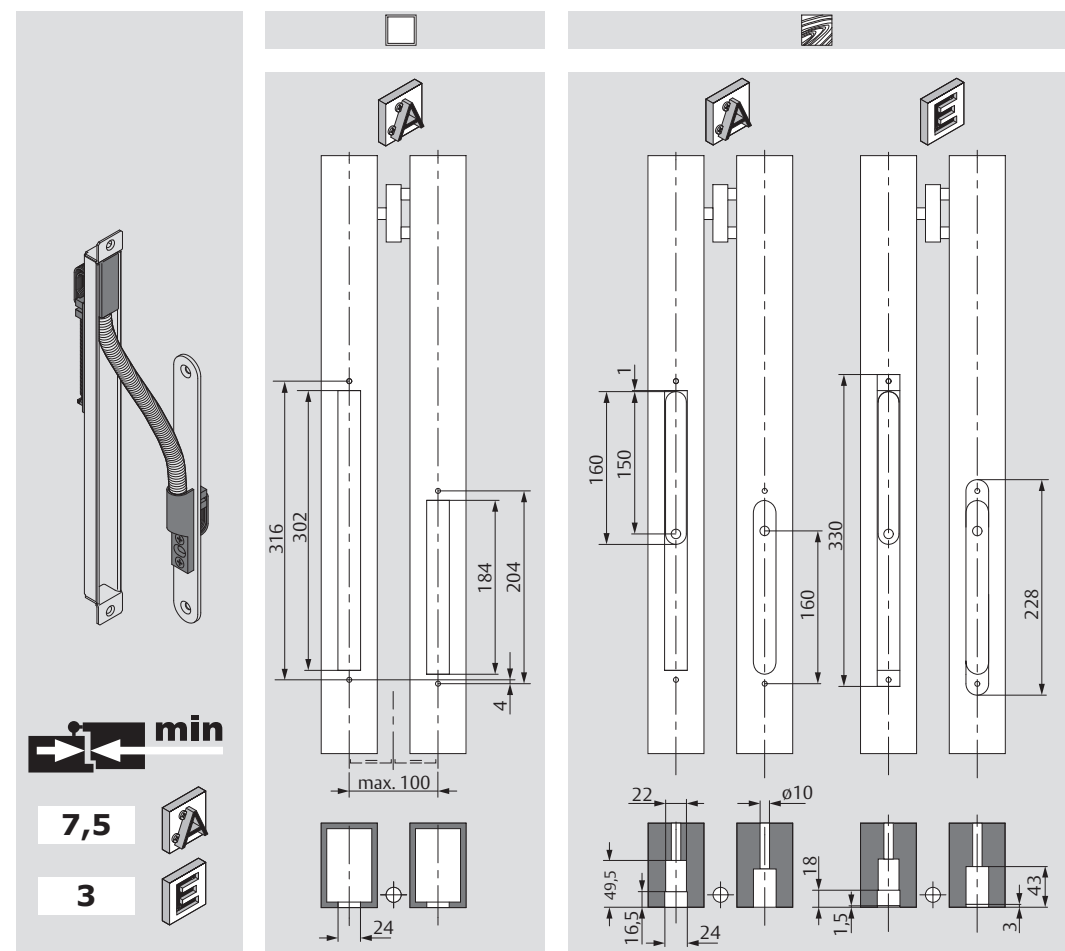


10314-31-----00

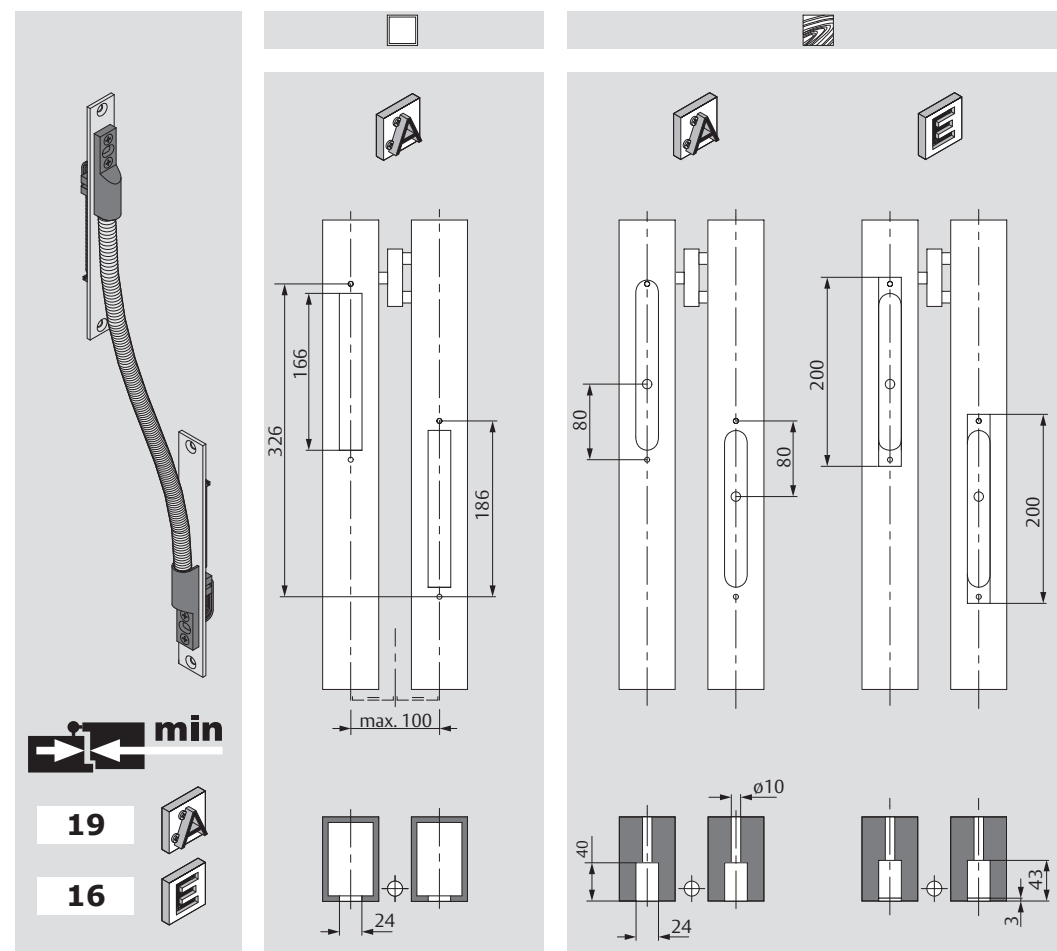


10313-24-----00

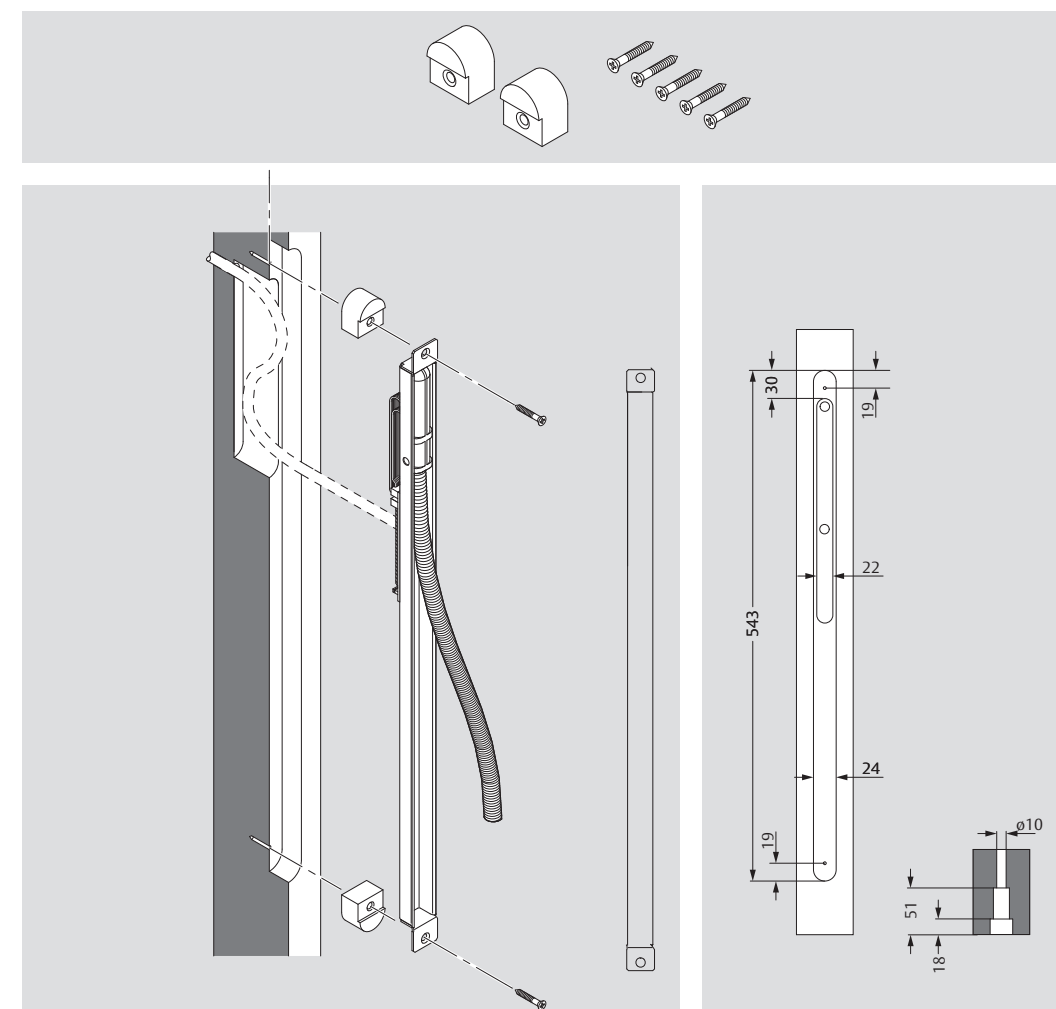


10314-40-20--00

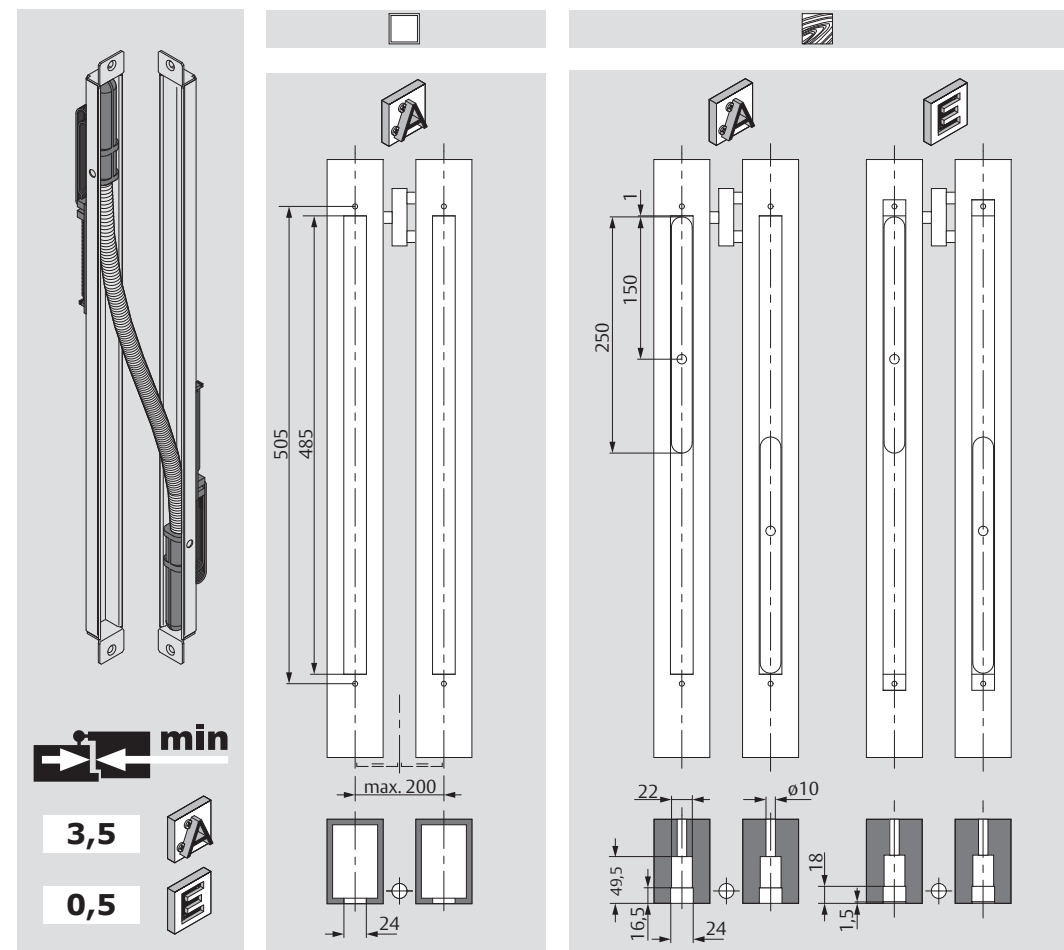


10314R40-----00

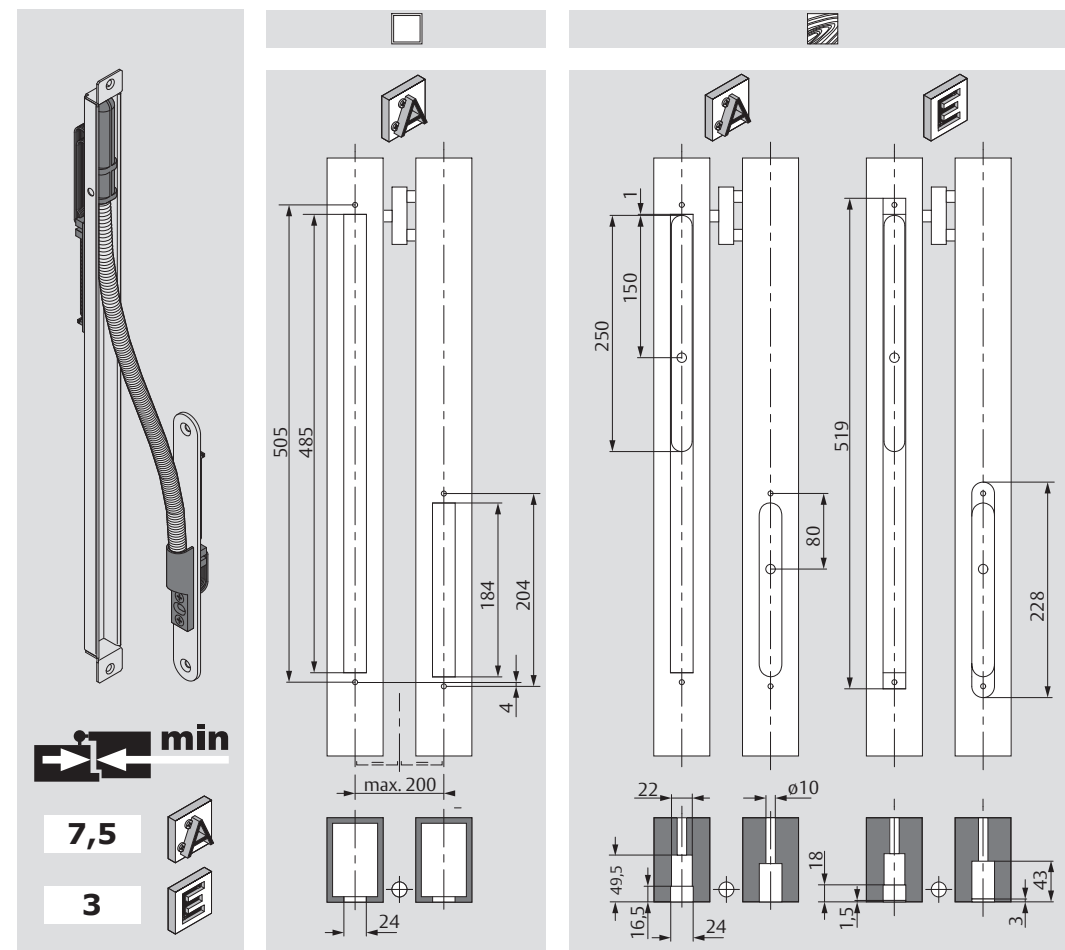


10314-40-----00

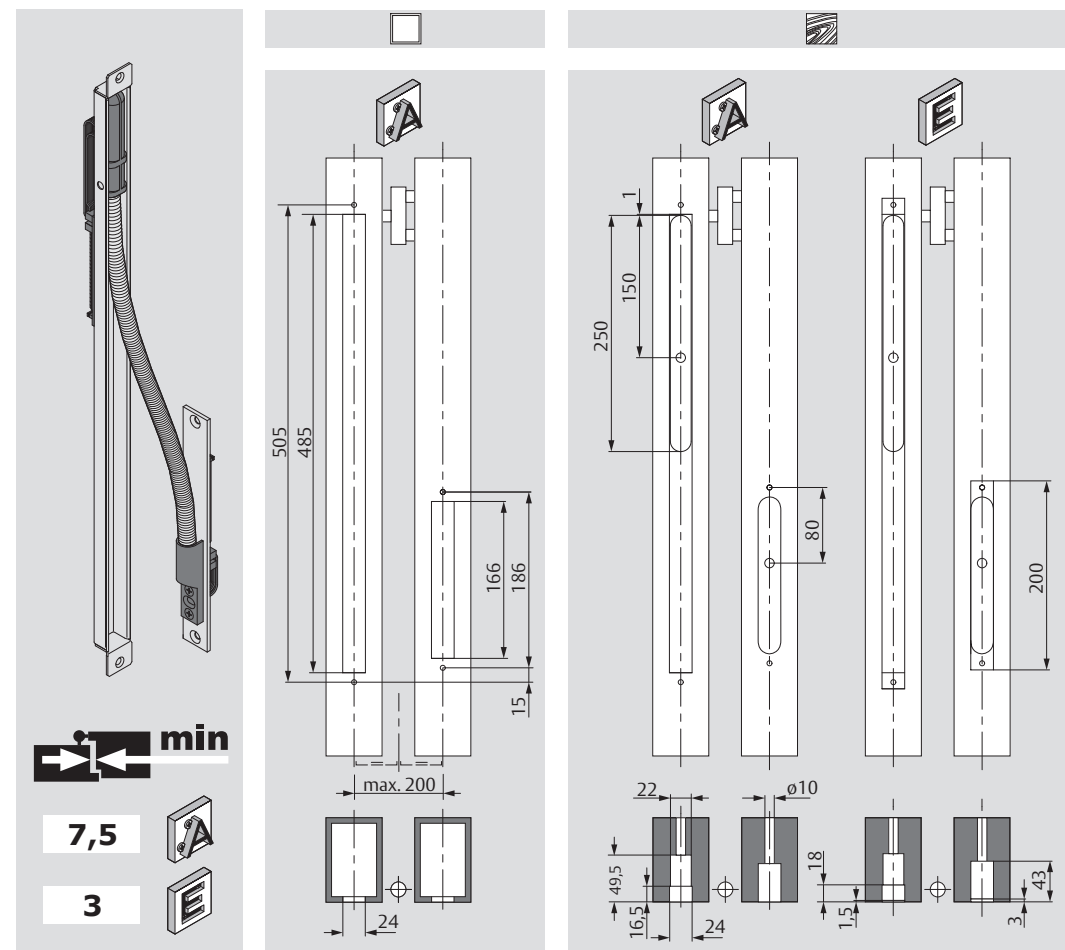

10314-41-----00

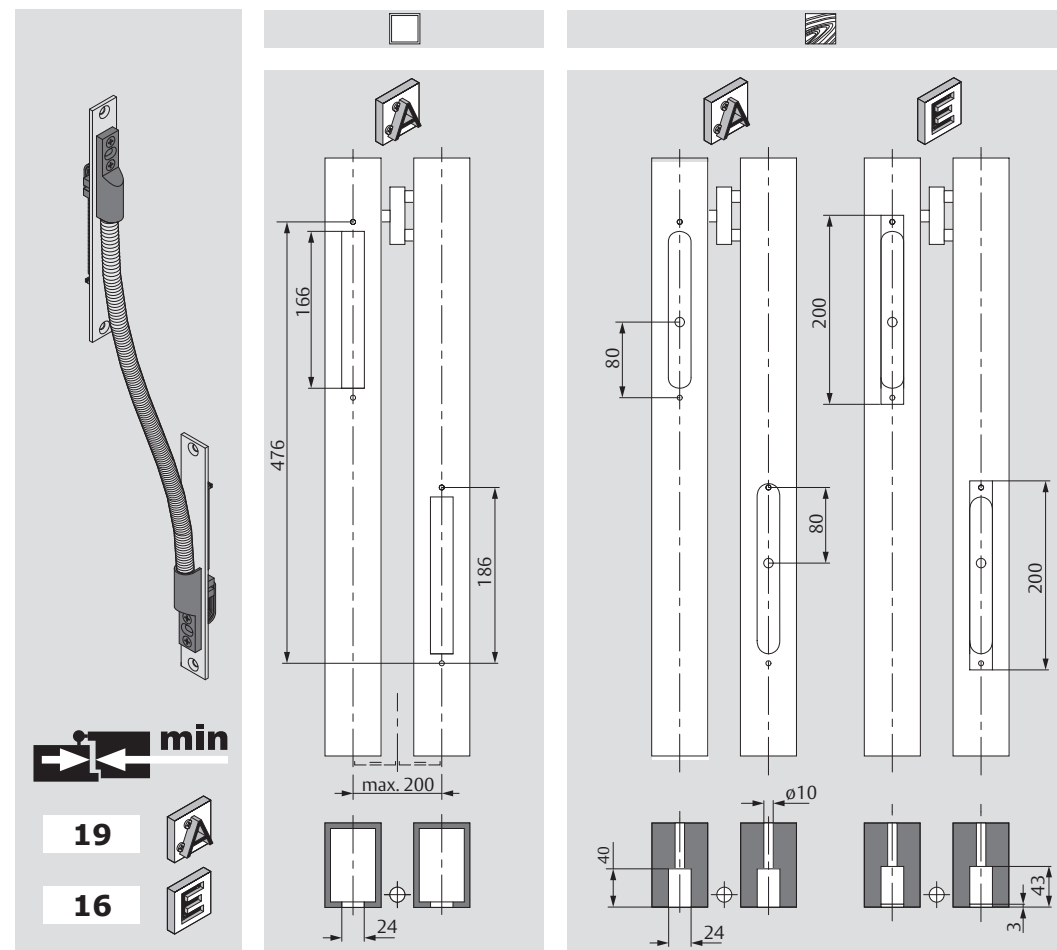

10314-40

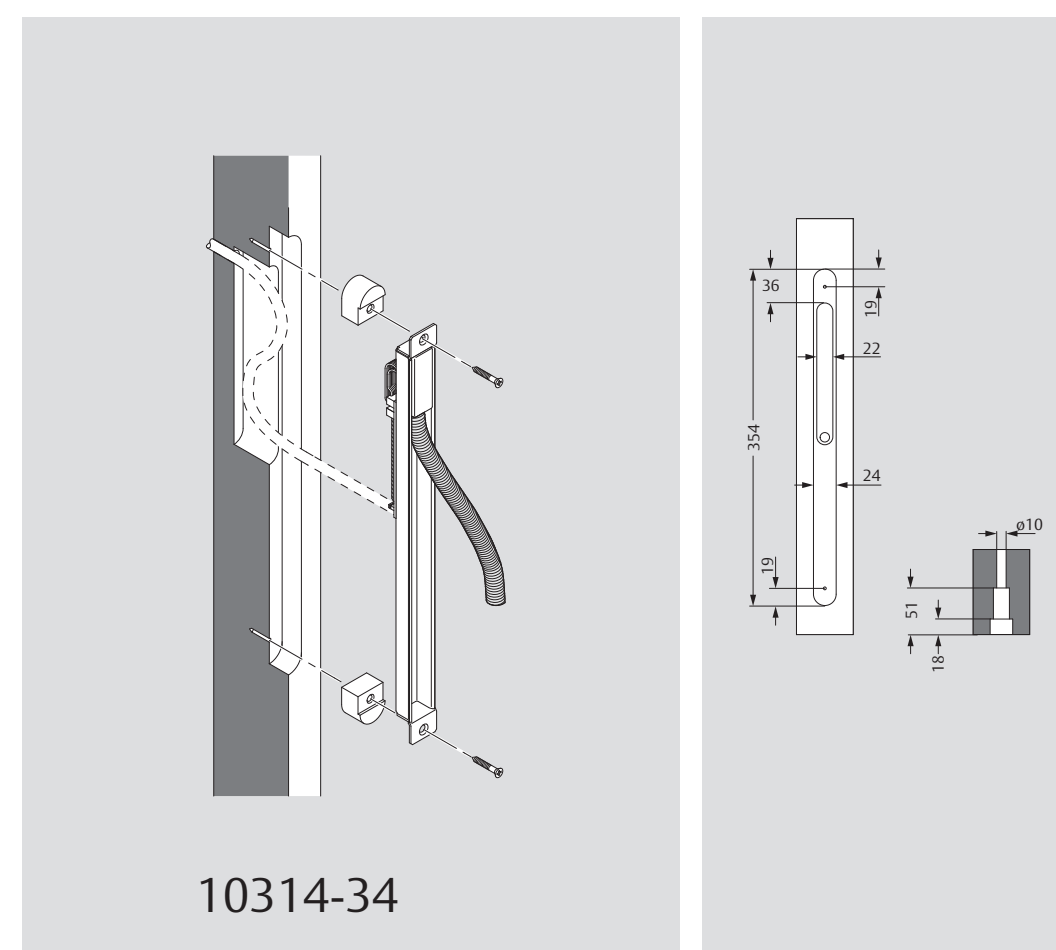

10314-34